



VOYAGER RACKS dot com

Made for: Land Rover

Model: Fits 2020 and on Defender 90/110/130

Part No: ND90/110/130/LPVR

Description: Low Profile Voyager Rack for Defender Series 2

Thank you for your recent purchase!

The following is needed to install your new Voyager Rack:

Box knife

BIC Lighter with torch-end/Small Butane torch

Plastic Pry-Tool/Plastic Cats Paw

Torx Wrench

13mm and 19mm Wrench/Socket with Spanner/Ratchet

INCLUDED


6 Threaded Stantions

6- 1/2" x Bolts

Wind Deflector & Hardware – INSTALL PRIOR TO LIFTING ON RACK

Step 1: Lower vehicle to access mode.

Step 2: Remove plastic caps that cover rail hardware (hard to see)

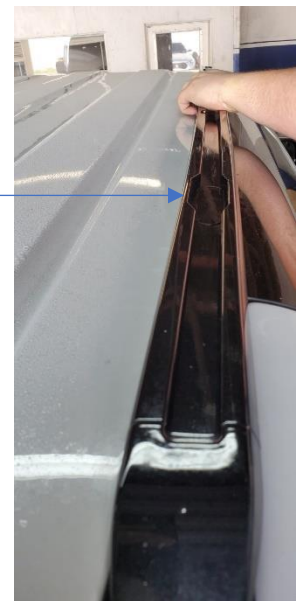



VOYAGER RACKS dot com

Step 3: Remove stock Torx bolts (if they do not back out easily, heat with hand-torch or lighter)

Install Provided Stantions, reusing Torx bolts

Step 4: Lift and set rack onto rack hardware, add washer below rack mount, and quickly add a bolt with washer through rack into Stantion, repeat. DO NOT TIGHTEN UNTIL ALL 6 BOLTS HAVE BEEN STARTED.

Step 5: Center Rack, Snug Bolts until rack does not move, and no air gap can be seen between hardware and rack.
SAFETY TIP: CHECK YOUR HARDWARE AFTER EACH VOYAGE.

*If you have any questions, or need assistance, please
email voyagerracks@gmail.com or call/text:*

+1 844-NAS-RACK

Thank you for your purchase!

-Voyager

