



# Installation of Voyager Rock Sliders

Tools needed:

- Panel Pry tool
- Box Knife
- Air saw (small) or small hand saw (Dremel)
- Sockets (metric)
- Ratchet with extensions
- Pry bar
- Rubber mallet
- Patience

If you need assistance, please call 941 235 7225 or Text 941 421 9300 if you need help in the evening. Thank you for your purchase; below are pictures to help with the installation – Voyager Offroad, LLC

## Installation of Voyager Rock Sliders

- 1) Raise vehicle to off-road mode and turn the wheels right or left, roll driver window down. Be careful when working under the vehicle. Do not trust the air suspension; use jack stands to stabilize the vehicle.
- 2) Remove the trim screws in each wheel well (Short Handle Philips bit).
- 3) Open the doors and use the trim pry-tool to pop off the trim.



- 4) Use a flat screwdriver to separate the door trim with their end caps



If you need assistance, please call 941 235 7225 or Text 941 421 9300 if you need help in the evening. Thank you for your purchase; below are pictures to help with the installation – Voyager Offroad, LLC

- 5) Remove the tape that covers each of the pre-threaded mounting holes.



- 6) Use a small floor jack to hold the rock slider in place.




- 7) Bolt the rock slider into place. You might have to use a pry bar to help align the holes. Get each bolt started before tightening the bolts down.

If you need assistance, please call 941 235 7225 or Text 941 421 9300 if you need help in the evening. Thank you for your purchase; below are pictures to help with the installation – Voyager Offroad, LLC

- 8) Use a Dremal (or small cutting tool) to trim the bottom tabs off the wheel well molding.



- 9) Use the Dremal (or box knife, tin snips) to trim the lower part of the front door jamb trim.

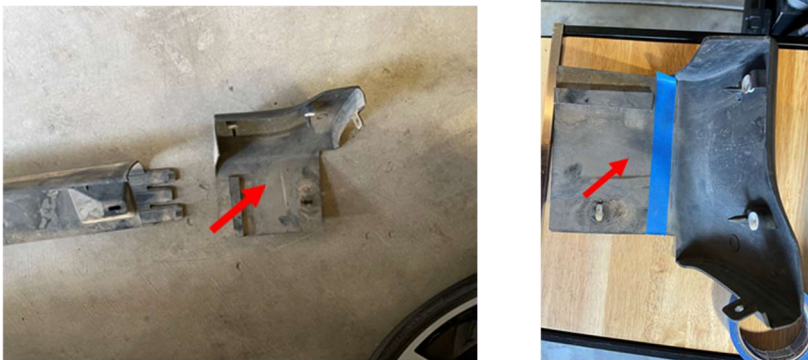

If you need assistance, please call 941 235 7225 or Text 941 421 9300 if you need help in the evening. Thank you for your purchase; below are pictures to help with the installation – Voyager Offroad, LLC

10) Place the end caps back in place (use a rubber mallet or your give it a good smack with your palm)



Voila! All done!

If you need assistance, please call 941 235 7225 or Text 941 421 9300 if you need help in the evening. Thank you for your purchase; below are pictures to help with the installation – Voyager Offroad, LLC